
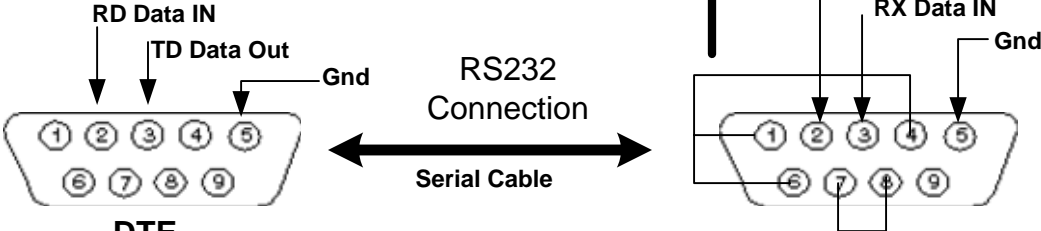


General Setup for using the A232DB (5v or 3.3v module)

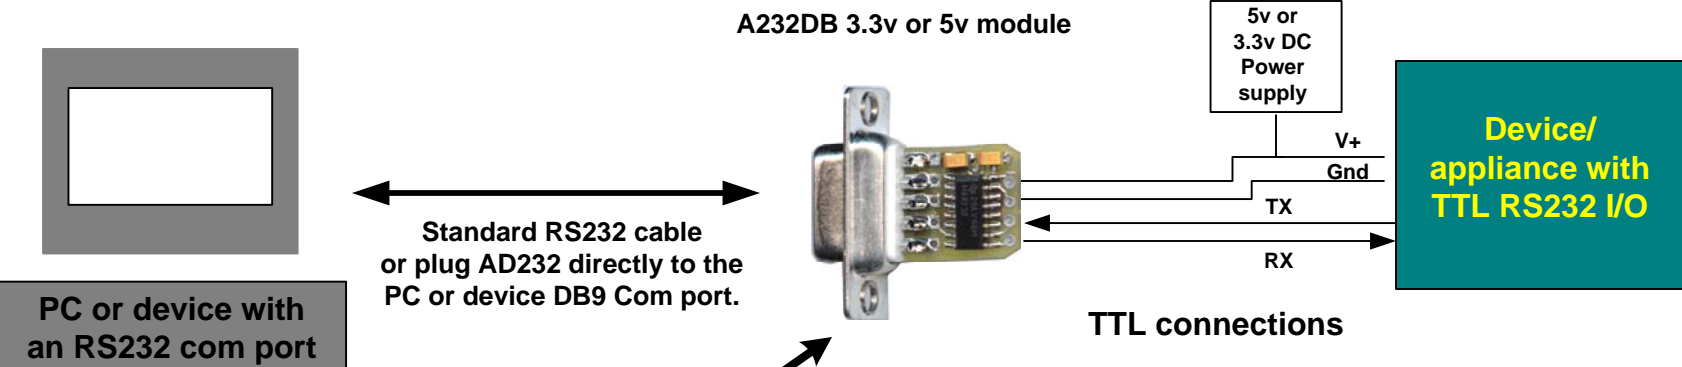

DTE
PC or RS232 device Connection DB9 Male

DCE
A232 circuit board DB9 Female

Since no hardware handshaking is involved the RTS and CTS lines are connected to each other (Pins 7,8) as well as the DTR, DSR and CD lines (Pins 4,6,1)

