


MMCADP Notes


Mounting an unshielded socket on the bottom side of the MMCADP board

Depending on the MMC sockets in stock, the MMCADP may be shipped with a TOP or BOTTOM mount MMC socket. The socket could be made of plastic or metal.

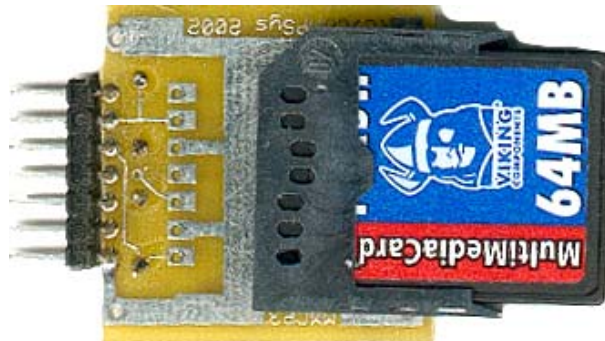

MMC socket connected to the **BOTTOM** side of the pcb. Shown with an MMC card in place (card not included with the kit)

For a flush fit, the two small plastic 'bosses' can be trimmed off with a sharp knife

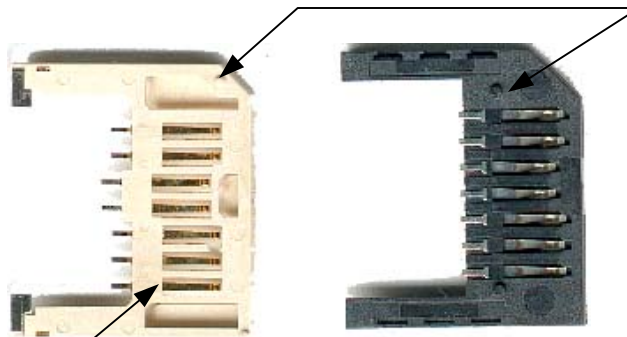

If the MMC socket does not have insulation on the bottom side then place a piece of electrical tape between the MMC socket and the pcb. This is to prevent any of the spring pins from touching the pcb's ground plane.

Carefully solder the contacts to the pcb. Check continuity after soldering.

